

Instruction Sheet:



DEWALT 70,000-BTU Outdoor Portable Cordless Forced Air Propane Heater Model No. DXH70CFAVX

⚠ WARNING: ENSURE THAT THE BLOWER FAN IS ON PRIOR TO PRESSING THE GAS/
IGNITER VALVE TO LIGHT THE HEATER.

⚠ AVERTISSEMENT: ASSUREZ-VOUS QUE LE VENTILATEUR EST ALLUMÉ AVANT
D'APPUYER SUR LA SOUPAPE DE GAZ/ALLUMEUR POUR ALLUMER LE CHAUFFAGE.

 Please attach the included warning sticker above the On/ Off power button as shown below.

Attached Warning



Starting Instructions:

2. Press the on/off switch for one half second to turn the blower fan on. The green LED light on the control panel will turn solid. Visually verify that the fan located on the back of the heater is operating. When the LED is illuminated solid green and the fan is operating, the heater is ready for operation.





3. After the blower fan has started, SLOWLY depress the black gas/ igniter valve button to ignite the heater. Keep the valve pressed for at least 30 seconds after the burner lights, then release the gas/ igniter button and the heater will continue to operate. If the burner shuts off, wait 20 seconds and repeat the starting sequence- beginning with turning the heater ON, making sure the blower fan is operating.



Support:

If you have any questions or need additional instructions, please contact our Technical Support Team at 1-855-805-5745.